

# ICE MACHINE CLEANING & SANITIZING

Ice machine should be cleaned and sanitized at least once a year.




The ice maker must be cleaned & sanitized at least once a year.

## **Cleaning Prep:**

- Remove the Front Panel, move the control switch to OFF.
   After <u>3 min.</u>, move the switch to ICE, then replace the panel.
- 2 After <u>3 min.</u>, remove the Front Panel, move the switch to OFF.
- 3 *<u>Remove all ice</u> from the ice storage bin and/or dispenser.*
- **WARNING! IF ON DISPENSER**, turn off the dispenser power supply after dispensing all the leftover ice.

## **Cleaning:**

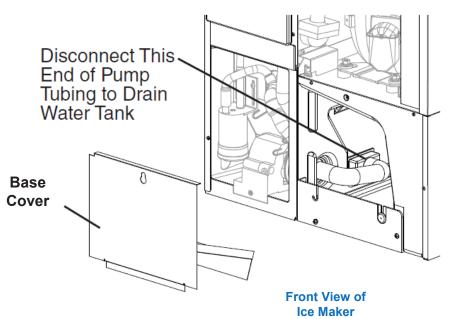

- 4 Remove the Base Cover, disconnect the Pump Tubing. After the water tank has drained, reconnect Pump Tubing. Do not replace the base cover at this time.
- 5 Refill water tank by moving the control switch to ICE, replace the Front Panel. After <u>3 minutes</u>, remove the Front Panel, then move the control switch to OFF.
- 6 Remove the Front Insulation Panel. Pour 14 fl.oz (414 ml) of Hoshizaki Scale Away into the water tank. Replace the Front Insulation Panel. Turn the cleaning valve <u>left</u> until completely vertical (open).
- NOTICE! AVOID EXCESSIVE FOAMING, wait <u>1 minute</u> before next step.
- Move the control switch to WASH, replace Front Panel.





## HOSHIZAKI

KM-340MAH, MWH KM-515MAH, MWH, MRH KM-600MAH KM-650MAH, MWH, MRH KM-901MAH, MWH, MRH/3



## Sanitizing:

3 min

CONTR

SWITCH

min

- Fill the water tank
- CLOSE the cleaning valve

14

16

- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation 15
   panel
- Pour .78 fl. oz (23 ml) of chlorine bleach\* into the water tank
- Replace the front insulation
   panel
- OPEN the cleaning valve

\* Use bleach without additives. Additives cause excessive foaming, and reduces effectiveness of the cleaning.

- Wait 1 minute to avoid excessive foaming
- Move control switch to WASH, replace the front panel
- After 45 minutes, remove 17
  the front panel
- Move control switch to OFF
- Disconnect the pump tubing 18
- After the water tank has drained, reconnect the pump tubing

Page 2

 
- 8 After 30 minutes, remove Front Panel, then move the control switch to OFF.
- **NOTICE! DO NOT** leave the control switch on WASH for extended periods when water tank is empty. It will damage water pump seals.
- 9 Remove the **Pump Tubing**. Clean all items (See Step 10). Once water tank has drained, replace and reconnect all the items.
- 10 In bad water conditions, a more thorough cleaning may be required. Turn off power supply, clean all items in a solution of 5 oz. of Scale Away per gallon of warm water. Rinse and replace the cube guides, float switch, water supply tubes, spray tubes and spray guides. Turn on power supply. Otherwise, continue to Step (1)

## Cleaning Rinse:

- 11 Turn the cleaning valve to the *right* until completely horizontal (closed). Move the control switch to ICE, replace Front Panel. After 3 minutes, remove the Front Panel. move switch to OFF.
- ▲ NOTICE! ICE MACHINE WILL NOT WORK, unless valve is completely closed.
- 12 Turn the cleaning valve to the <u>left</u> until completely vertical (open). Move the control switch to WASH, replace the Front Panel. After 5 minutes, remove the Front Panel, switch to OFF.
- 13 Disconnect the **Pump Tubing**. After the water tank has drained, reconnect Pump Tubing. Continue to Sanitation – Step (14) on front...







#### **CONTROL PANEL** ICE > 3 minutes > OFF



#### **CONTROL PANEL** WASH > 5 minutes > OFF



**OPEN cleaning valve:** To allow cleaning solution flow to

the inside the evaporator Turn left to open (vertical)

Scoop

Water Hoses



**CLOSE cleaning valve:** Must be closed for normal ice making operation Turn right to close (horizontal)

#### DOWNLOAD COMPLETE INSTRUCTION MANUAL



hoshizakiamerica.com/support

Type in the model number of your ice machine (including dashes) to download manuals

#### #51001 | 7.22.2016

### **CLEANING SCHEDULE**

- Dish soap, rinse well • Water Filters Check psi, change if req'd Exterior Dish soap & damp cloth Bin Door/Top Kit Warm water & clean cloth Ice Maker/Bin Follow these instructions • Water Supply Inlet Clean inlet screen Condenser
  - Inspect. Clean with brush Inspect. Replace if req'd
- DAILY | 
   MONTHLY | 
   YEARLY

## **WARNING!**

DO NOT use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals

#### **↓** sanitizing continued...

- **RINSE 1:** (Steps 19-21)
- CLOSE cleaning valve

19

20

21

- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- Move control switch to OFF
- OPEN cleaning valve
- Move control switch to WASH, replace the front panel
- After 5 minutes, remove the front panel
- Move control switch to OFF
- Disconnect the pump tubing
- After the water tank has drained, reconnect the pump tubing

#### RINSE 2 & 3: (Steps 22-28)

- Repeat 2x (Steps 19–21) for complete ice/food safety
- Clean the dispenser / storage bin liner with a neutral cleaner (dish soap)
- Rinse thoroughly
- CLOSE cleaning valve 29
- Move control switch to ICE, replace front panel
- Replace all panels in their (30) correct positions

### ▲ NOTICE!

IF ICE MAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning






The ice maker must be cleaned & sanitized at least once a year.

# HOSHIZAKI

KM-1100MAH. MWH. MRH KM-1340MAH, MWH, MRH KM-1601MRH/3

panels are off

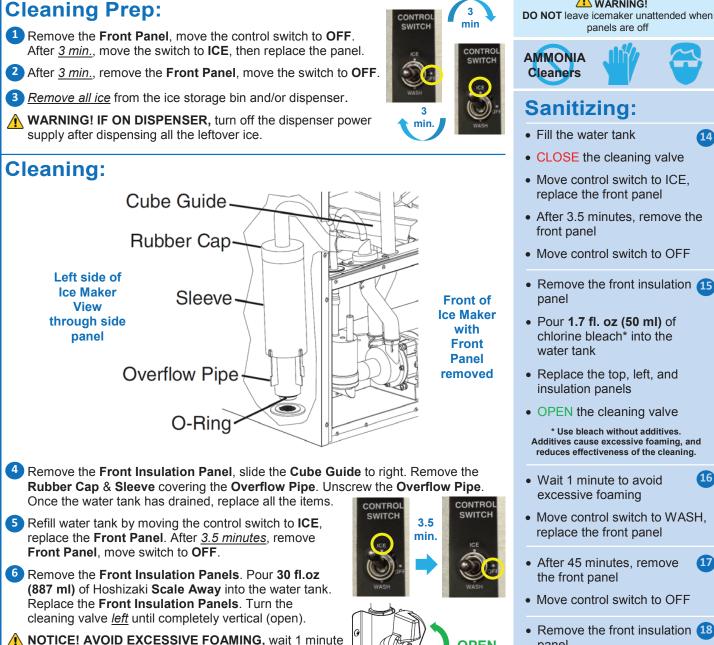

before next step.

#51003 | 7.22.2016

#### Move the control switch to WASH, replace Front Panel. NOTICE! DO NOT leave the control switch on WASH

for extended periods when water tank is empty. It will damage water pump seals.

8 After 30 minutes, remove Front Panel, then move the control switch to OFF.

**OPEN** 



Tech Support: 1.800.233.1940

Sanitizing:	
• Fill the water tank	14
CLOSE the cleaning valve	
• Move control switch to ICE, replace the front panel	
<ul> <li>After 3.5 minutes, remove th front panel</li> </ul>	e
Move control switch to OFF	
Remove the front insulation     panel	15
<ul> <li>Pour 1.7 fl. oz (50 ml) of chlorine bleach* into the water tank</li> </ul>	
<ul> <li>Replace the top, left, and insulation panels</li> </ul>	

OPEN the cleaning valve

\* Use bleach without additives. Additives cause excessive foaming, and reduces effectiveness of the cleaning.

16

 Wait 1 minute to avoid excessive foaming

• Move control switch to WASH, replace the front panel

- After 45 minutes, remove 17 the front panel
- Move control switch to OFF
- Remove the front insulation (18) panel
- Slide the cube guide to right
- Remove rubber cap & sleeve covering the overflow pipe
- · Unscrew overflow pipe, drain water tank
- Replace the rubber cap, sleeve, cube guide & insulation panel

 
- 9 Remove the Front Insulation Panel, slide the Cube Guide to right. Remove the Rubber Cap & Sleeve covering the Overflow Pipe. Unscrew the Overflow Pipe. Clean all items (See Step 10). Once the water tank has drained, replace all the items.
- 10 In bad water conditions, a more thorough cleaning may be required. Turn off power supply, clean all items in a solution of 5 oz. of Scale Away per gallon of warm water. Rinse and replace the cube guides, float switch, water supply tubes, spray tubes and spray guides. Turn on power supply. Otherwise, continue to step 11.



- 11 Turn the cleaning valve to the *right* until completely horizontal (closed). Move the control switch to ICE, replace Front Panel. After 3.5 minutes, remove the Front Panel, move switch to OFF.
- ▲ NOTICE! ICE MACHINE WILL NOT WORK. unless valve is completely closed.
- 12 Turn the cleaning valve to the *left* until completely vertical (open). Move the control switch to WASH, replace the Front Panel. After 5 minutes, remove the Front Panel, switch to OFF.
- 13 Remove the Front Insulation Panel, slide the Cube Guide to right. Remove the Rubber Cap & Sleeve covering the Overflow Pipe. Unscrew the Overflow Pipe. Once the water tank has drained, replace all the items.

Continue to Sanitation – Step 14 on front...





#### CONTROL PANEL > 3.5 minutes > OFF



#### **CONTROL PANEL** WASH > 5 minutes > OFF



- OPEN cleaning valve: To allow cleaning solution flow to
- the inside the evaporator Turn left to open (vertical)

Scoop

Exterior



**CLOSE** cleaning valve: Must be closed for normal ice making operation Turn right to close (horizontal)

#### DOWNLOAD COMPLETE **INSTRUCTION MANUAL:**



hoshizakiamerica.com/support

Type in the model number of your ice machine (including dashes) to download manuals

#### #51003 | 7.22.2016

**CLEANING SCHEDULE** 

- Dish soap, rinse well Water Filters Check psi, change if req'd Dish soap & damp cloth Bin Door/Top Kit Warm water & clean cloth Ice Maker/Bin Follow these instructions • Water Supply Inlet Clean inlet screen
- Condenser Inspect. Clean with brush Water Hoses Inspect. Replace if req'd
  - DAILY | 
     MONTHLY | 
     YEARLY

# 🔔 WARNING!

**DO NOT** use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals

RINSE 1: (Steps 19-21)

**↓** sanitizing continued...

19

20

- CLOSE cleaning valve
- Move control switch to ICE. replace the front panel
- After 3.5 minutes, remove the front panel
- Move control switch to OFF
- OPEN cleaning valve
- Move control switch to WASH, replace the front panel
- After 5 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation 21 panel
- Slide the cube guide to right
- Remove rubber cap & sleeve covering the overflow pipe
- Unscrew overflow pipe, drain water tank
- Replace the rubber cap, sleeve, cube guide & insulation panel

#### RINSE 2 & 3: (Steps 22-28) 22

- Repeat 2x (Steps 19–21) for complete ice/food safety
- 29 Clean the dispenser / storage bin liner with a neutral cleaner (dish soap)
- Rinse thoroughly
- 30 • CLOSE the cleaning valve
- Move control switch to ICE
- · Replace all panels

### **NOTICE!**



Tech Support: 1.800.233.1940

31



SWITCH


min.

The ice maker must be cleaned & sanitized at least once a year.

## **Cleaning Prep:**

- Remove the Front Panel, move the control switch to OFF. After <u>3 min.</u>, move the switch to ICE, then replace the panel.
- After <u>3 min.</u>, remove the Front Panel, move the switch to OFF.
- 3 *<u>Remove all ice</u> from the ice storage bin and/or dispenser.*
- **WARNING! IF ON DISPENSER**, turn off the dispenser power supply after dispensing all the leftover ice.

## **Cleaning:**

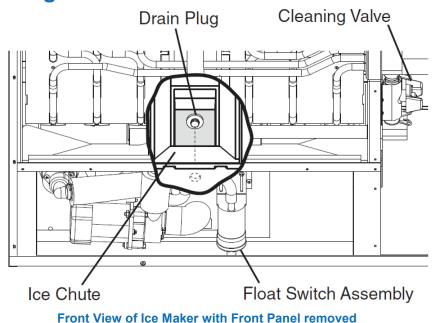

- Remove the Front Insulation Panel, remove the Drain Plug. After the water tank has drained, replace Drain Plug. Replace the Front Insulation Panel.
- NOTICE! DO NOT cross thread the drain plug.
- 5 Refill water tank by moving the control switch to ICE, replace the Front Panel. After <u>3 minutes</u>, remove the Front Panel, then move the control switch to OFF.
- 6 Remove the Front Insulation Panel. Pour Hoshizaki Scale Away into the water tank (see Table).


Replace the **Front Insulation Panel**. Turn the cleaning valve <u>*left*</u> until completely vertical (open).

Model	Scale Away
KM-1601 and Smaller	32 fl. oz. (946 ml)
KM-1900 and Larger	43 fl. oz. (1,272 ml)

 NOTICE! AVOID EXCESSIVE FOAMING, wait <u>1 minute</u> before next step.










# HOSHIZAKI

KM-1301SAH/3, SWH/3, SRH/3 KM-1601SAH/3, SWH/3, SRH/3 KM-1900SAH/3, SWH/3, SRH/3 KM-2100SWH3, SRH3 KM-2500SWH3, SRH3

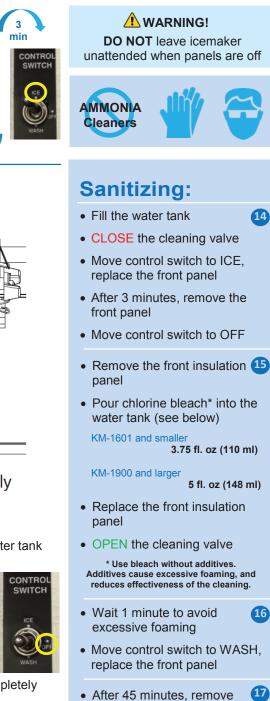

, .....

the front panel

· Move control switch to OFF

CONTROL

SWITCH

30

min.

- 7 Move the control switch to WASH, replace Front Panel.
- 8 After <u>30 minutes</u>, remove Front Panel, then move the control switch to OFF.
- **NOTICE! DO NOT** leave the control switch on WASH for extended periods when water tank is empty. It will damage water pump seals.
- 9 Remove the Front Insulation Panel, remove the Drain Plug. Clean all items (See Step 10). Once water tank has drained, replace all items.
- **10** In bad water conditions, a more thorough cleaning may be required. Turn off power supply, clean all items in a solution of 5 oz. of Scale Away per gallon of warm water. Rinse and replace the cube guides, float switch, water supply tubes, spray tubes and spray guides. Turn on power supply. Otherwise, continue to Step 1

## Cleaning Rinse:

- 11 Turn the cleaning valve to the <u>right</u> until completely horizontal (closed). Move the control switch to ICE, replace Front Panel. After 3 minutes, remove the Front Panel, move switch to OFF.
- ▲ NOTICE! ICE MACHINE WILL NOT WORK, unless valve is completely closed.
- 12 Turn the cleaning valve to the *left* until completely vertical (open). Move the control switch to WASH, replace the Front Panel. After 5 minutes, remove the Front Panel, switch to OFF.
- 13 Remove the Front Insulation Panel. then remove the Drain Plug. After the water tank has drained, replace all items. Continue to Sanitation – Step (1) on front...



- **OPEN** cleaning valve: To allow cleaning solution flow to the inside the evaporator
- Turn left to open (vertical)



**CLOSE cleaning valve:** making operation



### **CLEANING SCHEDULE**

- Scoop Dish soap, rinse well Water Filters Check psi, change if req'd Exterior Dish soap & damp cloth Bin Door/Top Kit Warm water & clean cloth Ice Maker/Bin Follow these instructions Water Supply Inlet Clean inlet screen Condenser
- Inspect. Clean with brush Water Hoses Inspect. Replace if req'd
- DAILY | MONTHLY | YEARLY

 


**DO NOT** use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals

CONTROL

SWITCH



#### CONTROL PANEL ICE > 3 minutes > **OFF**



#### **CONTROL PANEL** WASH > 5 minutes > OFF

Must be closed for normal ice

- Turn right to close (horizontal)
- 22 RINSE 2 & 3: (Steps 22-28) • Repeat 2x (Steps 19-21) for complete ice/food safety Clean the dispenser / storage bin liner with a neutral cleaner (dish soap) Rinse thoroughly 29 • CLOSE cleaning valve
  - replace the front panel
- correct positions



IF ICE MAKER IS ON DISPENSER. remember to turn on the dispenser after cleaning

#51002 | 7.21.2016

DOWNLOAD COMPLETE

**INSTRUCTION MANUAL:** 

hoshizakiamerica.com/support

Type in the model number of your

ice machine (including dashes) to

download manuals

Tech Support: 1.800.233.1940



Remove the front

**↓** sanitizing continued...

18

19

20

21

- insulation panel and drain plug
- After the water tank has drained, replace drain plug and front insulation panel

#### RINSE 1: (Steps 19-21)

- CLOSE cleaning valve
- Move control switch to ICE, replace the front panel
- · After 3 minutes, remove the front panel
- Move control switch to OFF
- OPEN cleaning valve
- Move control switch to WASH, replace the front panel
- · After 5 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation panel and drain plug
- After the water tank has drained, replace drain plug and front insulation panel

- Move control switch to ICE.
- Replace all panels in their 30



SWITCH


EDVICE

min.

#### The icemaker must be cleaned & sanitized at least once a year.

# **Cleaning Prep:**

- Remove the Front Panel, move the control switch to OFF. After <u>3 min.</u>, move the control switch to ICE, then replace the Front Panel.
- 2 After <u>3 min.</u>, remove the Front Panel, move the control switch to OFF. This removes the cubes from the evaporator. Replace the Front Panel.
- 3 Remove all ice from the dispenser unit/ice storage bin.
  - ATTENTION! IF ON DISPENSER, turn off the dispenser power supply after dispensing all the ice.

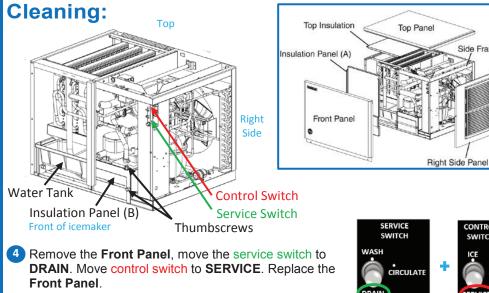

- 5 After <u>2 minutes</u>, remove the **Front Panel**, move the control switch to **OFF**.
- Dilute Hoshizaki Scale Away with warm water (see Table below). Remove the Insulation Panel (A) and pour cleaning solution into the water tank.

KMD-410, 460, 530		
Scale Away	9.5 fl. oz (281 ml)	
Warm Water	1.8 gal. (6.8 l)	


In bad water conditions, a more thorough cleaning may be required. Move control switch to OFF, then turn off the power supply. Dilute 5 oz. of Scale Away to 1 gallon of warm water. Remove and clean the float switch assembly (see Float Switch Cleaning on back), water supply tubes, spray tubes, water tank, and pump motor and float switch assembly. Rinse thoroughly, then replace in their correct positions. Turn the power supply back on. Otherwise, continue to Step 8.



After 2 min.

# HOSHIZAKI

KMD-410MAH, MWH, MRH KMD-460MAH, MWH, MRH KMD-530MAH, MWH, MRH

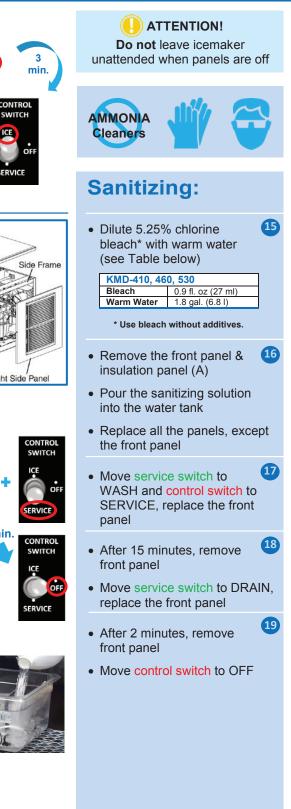

#51009 | 4.28.2017

Disconnect the discharge hose.

Loosen the two thumbscrews securing the

Disconnect the pump motor and float switch

While pushing up on the snap tab, pull out the

water tank, cube guide, pump motor bracket,

and pump motor and float switch assembly all

Remove the pump motor bracket securing the

float switch to the top of the assembly, remove

See Step 7 for cleaning steps. Reassemble in

the reverse order they were removed.

connectors from the side of the control box.

**KMD-410M H:** 

together.

the float switch\*

pump motor bracket.

#### KMD-460 & 530M\_H:

Loosen the two thumbscrews on the pump insulation panel (B) and remove the panel.

Disconnect the discharge hose, the drain valve hose, and the overflow drain hose.


Disconnect the pump motor and then the float switch connectors from the control board.

Remove the two thumbscrews securing the pump motor and float switch assembly.

Pull out the water tank, cube guide, and pump motor and float switch assembly all together.

Remove the screw securing the float switch to the top of the assembly, remove the float switch\*.

See Step 7 for cleaning steps. Reassemble in the reverse order they were removed.

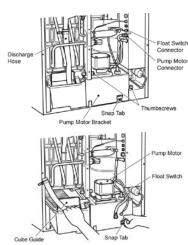

SERVIC

SWITCH

CIRCULATE

VASH

SERVICE

SWITCH

CIRCULATE

WASH

DRAIN

SWITCH

After

30 min.

\* Remove retainer rod (take care not to bend excessively) from bottom of the float switch housing & clean all float parts.

- 8 Replace all the Panels, except the Front Panel. Move the service switch to WASH, and the control switch to SERVICE. Replace the Front Panel.
- 9 After <u>30 minutes</u>, remove the Front Panel, move the service switch to DRAIN. Replace the Front Panel.
- ATTENTION! To prevent damage to the water pump, do not leave the control switch on SERVICE for extended periods when water tank is empty.

#### **Cleaning Rinse:**

Water Tank

- After <u>2 minutes</u>, remove the Front Panel, move the control switch to ICE. Replace the Front Panel.
- After <u>3 minutes</u>, move the service switch to WASH, and the control switch to SERVICE. Replace the Front Panel.
- 12 After <u>5 minutes</u>, remove the Front Panel, move the service switch to DRAIN. Replace the Front Panel
- 43 After <u>2 minutes</u>, remove the Front Panel, move the control switch to OFF.
- 14 Repeat 3x (Steps 10 thru 13) to rinse thoroughly. Continue to Sanitation Step 15 on front...



**↓** sanitizing continued...

20

23

#### RINSE 1: (Steps 20-22)

- Move control switch to ICE, replace front panel
- After 3 minutes, remove the front panel
- Move service switch to WASH and control switch to SERVICE, replace the front panel
- After 5 minutes, remove the <sup>21</sup> front panel
- Move service switch to DRAIN, replace the front panel
- After 2 minutes, remove 22 the front panel
- Move control switch to OFF, replace the front panel

#### **RINSE 2:**

- Repeat RINSE 1 (Steps 20–22) for complete ice/food safety
- Clean the dispenser unit / ice storage bin liner with a neutral cleaner (dish soap)
- · Rinse thoroughly
- Move control switch to ICE, 25 replace front panel

#### ATTENTION!

IF ICEMAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning


DO NOT use ammonia type cleaners

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals



#### **CLEANING SCHEDULE**

	Scoop	Dish soap, rinse well
	Water Filters	Check psi, change if req'd
)	Exterior	Dish soap & damp cloth
	Bin Door/Top Kit	Warm water & clean cloth
	Icemaker/Bin	Follow these instructions
t	Water Supply Inlet	Clean inlet screen
	Condenser	Inspect. Clean with brush
	Water Hoses	Inspect. Replace if req'd
	• DAILY   • MON	

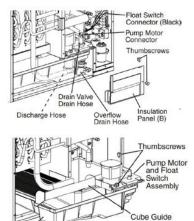



# HOSHIZAKI


KMD-850MAH, MWH, MRH KMD-901MAH, MWH, MRH

The ice maker must be cleaned & sanitized at least once a year.

# **Cleaning Prep:**

- Remove the Front Panel, move the control switch to OFF.
   After <u>3 min.</u>, move the switch to ICE, then replace the panel.
- 2 After <u>3 min.</u>, remove the Front Panel, move the switch to OFF.
- 3 <u>Remove all ice</u> from the ice storage bin and/or dispenser.
- **WARNING! IF ON DISPENSER**, turn off the dispenser power supply after dispensing all the leftover ice.

## **Cleaning:**

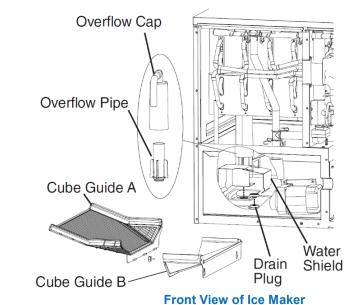

- 4 Remove the Front Insulation Panel, Cube Guide B & A, Overflow Cap & Pipe, Water Shield, and Drain Plug. After the water tank has drained, replace all items.
- NOTICE! DO NOT cross thread the drain plug or overflow pipe.
- 5 Refill water tank by moving the control switch to ICE, replace the Front Panel. After <u>3 minutes</u>, remove Front Panel, move switch to the OFF position.
- 6 Remove the Front Insulation Panels. Pour 14 fl.oz (414 ml) of Hoshizaki Scale Away into the water tank. Replace the front insulation panel. Turn the cleaning valve <u>left</u> until completely vertical (open).
- NOTICE! AVOID EXCESSIVE FOAMING, wait <u>1</u> minute before next step.
- 7 Move the control switch to WASH, replace Front Panel.
- **NOTICE! DO NOT** leave the control switch on WASH for extended periods when water tank is empty. It will damage water pump seals.





14

16

**WARNING!** 

## Sanitizing:

- Fill the water tank
- CLOSE the cleaning valve
- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation 15 panel
- Pour .78 fl. oz (23 ml) of chlorine bleach\* into the water tank
- Replace the front insulation panel
- OPEN the cleaning valve

\* Use bleach without additives. Additives cause excessive foaming, and reduces effectiveness of the cleaning.

- Wait 1 minute to avoid excessive foaming
- Move control switch to WASH, replace the front panel
- After 45 minutes, remove 17
  the front panel
- Remove the front panel
- Move the control switch to OFF
- Remove the front insulation 18 panel, cube guide B & A, overflow cap & pipe, water shield, and drain plug
- After the water tank has drained, replace all items

#51004 | 7.22.2016

CONTRO

SWITCH

3

min.

CONTRO

SWITCH

OPEN

- 8 After 30 minutes, remove Front Panel, then move the control switch to OFF.
- 9 Remove the Front Insulation Panel, Cube Guide B & A, Overflow Cap & Pipe, Water Shield, and Drain Plug. Clean all items (See Step 10). After the water tank has drained, replace all items.
- **10** In bad water conditions, a more thorough cleaning may be required. Turn off power supply, clean all items in a solution of 5 oz. of Scale Away per gallon of warm water. Rinse and replace the cube guides, float switch, water supply tubes, spray tubes and spray guides. Turn on power supply. Otherwise, continue to step 11.

## **Cleaning Rinse:**

- 11 Turn the cleaning valve to the <u>right</u> until completely horizontal (closed). Move the control switch to ICE, replace Front Panel. After 3 minutes, remove the Front Panel, move switch to OFF.
- ▲ NOTICE! ICE MACHINE WILL NOT WORK, unless valve is completely closed.
- 12 Turn the cleaning valve to the *left* until completely vertical (open). Move the control switch to WASH, replace the Front Panel. After 5 minutes, remove the Front Panel, switch to OFF.
- 13 Remove the Front Insulation Panel, Cube Guide B & A, Overflow Cap & Pipe, Water Shield, and Drain Plug. After the water tank has drained, replace all items.

Continue to Sanitation – Step (4) on front...



#### **OPEN cleaning valve:** To allow cleaning solution flow to the inside the evaporator Turn left to open (vertical)

Scoop

Condenser



## Must be closed for normal ice making operation

Turn right to close (horizontal)

CONTROL CONTROL SWITCH SWITCH 30 min.



**CLOSE** 

# **CONTROL PANEL**



# CONTROL PANEL WASH > 5 minutes > OFF

CLOSE cleaning valve:

#### **↓** sanitizing continued...

#### RINSE 1: (Steps 19-21)

- CLOSE cleaning valve
- Move control switch to ICE, replace the front panel

19

20

- After 3 minutes, remove the front panel
- Move control switch to OFF
- OPEN cleaning valve
- Move control switch to WASH, replace the front panel
- After 5 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation 21 panel, cube guide B & A. overflow cap & pipe, water shield, and drain plug
- After the water tank has drained, replace all items
- **RINSE 2 & 3:** (Steps 22-27) 22
- Repeat 2x (Steps 19-21) for complete ice/food safety
- 28 Clean the dispenser / storage bin liner with a neutral cleaner (dish soap)
- · Rinse thoroughly
- CLOSE the cleaning value 29
- Move control switch to ICE
- Replace all panels

DOWNLOAD COMPLETE **INSTRUCTION MANUAL:** 



hoshizakiamerica.com/support

Type in the model number of your ice machine (including dashes) to download manuals

## **CLEANING SCHEDULE**

- Dish soap, rinse well Water Filters Check psi, change if reg'd Exterior Dish soap & damp cloth
- Bin Door/Top Kit Warm water & clean cloth
- Ice Maker/Bin Follow these instructions Water Supply Inlet Clean inlet screen
  - Inspect. Clean with brush
- Water Hoses Inspect, Replace if reg'd DAILY | 
   MONTHLY | 
   YEARLY

### 

DO NOT use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals

## **NOTICE!**

IF ICE MAKER IS ON DISPENSER. remember to turn on the dispenser after cleaning



30

ICE










**Cleaning Prep:** 

# Ice Machine **Cleaning & Sanitizing**

# HOSHIZAKI

KMH-2000SWH/3 KMH-2000SRH/3

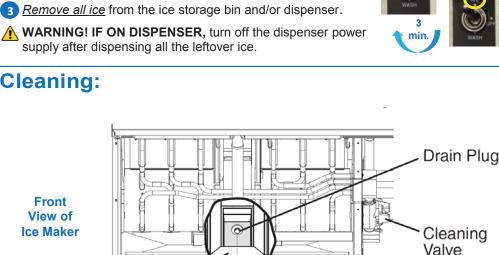

The ice maker must be cleaned & sanitized at least once a year.

Remove the Front Panel, move the control switch to OFF.

After 3 min., move the switch to ICE, then replace the panel. 2 After 3 min., remove the Front Panel, move the switch to OFF.

# **Cleaning:**

Ice Chute



**NOTICE! DO NOT** cross thread the drain plug.

- 5 Refill water tank by moving the control switch to ICE, replace the Front Panel. After 3 minutes, remove Front Panel, move switch to the OFF position.
- 6 Remove the Front Insulation Panels. Pour 43 fl.oz (1,272 ml) of Hoshizaki Scale Away into the water tank. Replace the front insulation panel. Turn the cleaning valve left until completely vertical (open).
- NOTICE! AVOID EXCESSIVE FOAMING, wait 1 minute before next step.
- 7 Move the control switch to WASH, replace Front Panel.
- NOTICE! DO NOT leave the control switch on WASH for extended periods when water tank is empty. It will damage water pump seals.



CONTRO

CONTRO



## unattended when panels are off Cleaners

3 min WARNING!

**DO NOT** leave icemaker



14

# Sanitizing:

- · Fill the water tank
- CLOSE the cleaning valve
- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation (15) nanel
- Pour 5 fl. oz (148 ml) of chlorine bleach\* into the water tank
- Replace the front insulation panel
- OPEN the cleaning valve

\* Use bleach without additives. Additives cause excessive foaming, and reduces effectiveness of the cleaning.

- Wait 1 minute to avoid 16 excessive foaming
- Move control switch to WASH, replace the front panel
- After 45 minutes, remove 17 the front panel
- Move control switch to OFF
- Remove the front insulation panel
- · Remove drain plug
- After the water tank has drained, replace drain plug and insulation panel

#51005 | 7.22.2016

- 8 After 30 minutes, remove Front Panel, then move the control switch to OFF.
- 9 Remove the Front Insulation Panels. Remove the Drain Plug. <u>Clean all items (See Step 10)</u>. Once the water tank has drained, replace the Drain Plug and Insulation Panel.
- In bad water conditions, a more thorough cleaning may be required. Turn off power supply, clean all items in a solution of 5 oz. of Scale Away per gallon of warm water. Rinse and replace the cube guides, float switch, water supply tubes, spray tubes and spray guides. Turn on power supply. Otherwise, continue to step (1).



- 11 Turn the cleaning valve to the <u>right</u> until completely horizontal (closed). Move the control switch to ICE, replace Front Panel. After <u>3 minutes</u>, remove the Front Panel, move switch to OFF.
- NOTICE! ICE MACHINE WILL NOT WORK, unless valve is completely closed.
- 12 Turn the cleaning valve to the <u>left</u> until completely vertical (open). Move the control switch to WASH, replace the Front Panel. After <u>5 minutes</u>, remove the Front Panel, switch to OFF.
- 13 Remove the Front Insulation Panel. Remove the Drain Plug. Once the water tank has drained, replace the Drain Plug and Insulation Panel.

Continue to Sanitation – Step (4) on front...



OPEN cleaning valve:
To allow cleaning solution flow to the inside the evaporator
Turn left to open (vertical)



CLOSE cleaning valve:
Must be closed for normal ice making operation
Turn right to close (horizontal)

# DOWNLOAD COMPLETE INSTRUCTION MANUAL:



hoshizakiamerica.com/support

Type in the model number of your ice machine (including dashes) to download manuals

### CLEANING SCHEDULE

Scoop Dish soap, rinse well Water Filters Check psi, change if req'd Exterior Dish soap & damp cloth Bin Door/Top Kit Warm water & clean cloth Ice Maker/Bin Follow these instructions • Water Supply Inlet Clean inlet screen Condenser Inspect. Clean with brush Water Hoses Inspect. Replace if req'd DAILY | 
 MONTHLY | 
 YEARLY

### 

**DO NOT** use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals



Tech Support: 1.800.233.1940

- **RINSE 1:** (Steps 19-21)
- CLOSE cleaning valve

19

20

21

 
28

30

- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- Move control switch to OFF
- OPEN cleaning valve
- Move control switch to WASH, replace the front panel
- After 5 minutes, remove the front panel
- · Move control switch to OFF
- Remove the front insulation panel
- · Remove drain plug
- After the water tank has drained, replace and reconnect all the items
- RINSE 2 & 3: (Steps 22-27) 22
- Repeat 2x (Steps 19–21) for complete ice/food safety
- Clean the dispenser / storage bin liner with a neutral cleaner (dish soap)
- Rinse thoroughly
- CLOSE the cleaning value 29
- Move control switch to ICE
- Replace all panels

#### 

IF ICE MAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning



> 3 minutes > OFF

**OPEN** 

CONTROL PANEL

**CONTROL PANEL** 


WASH > 5 minutes > OFF

ICE



# HOSHIZAKI

KML-250MAH, MWH KML-351MAH, MWH KML-451MAH, MWH KML-631MAH, MWH, MRH

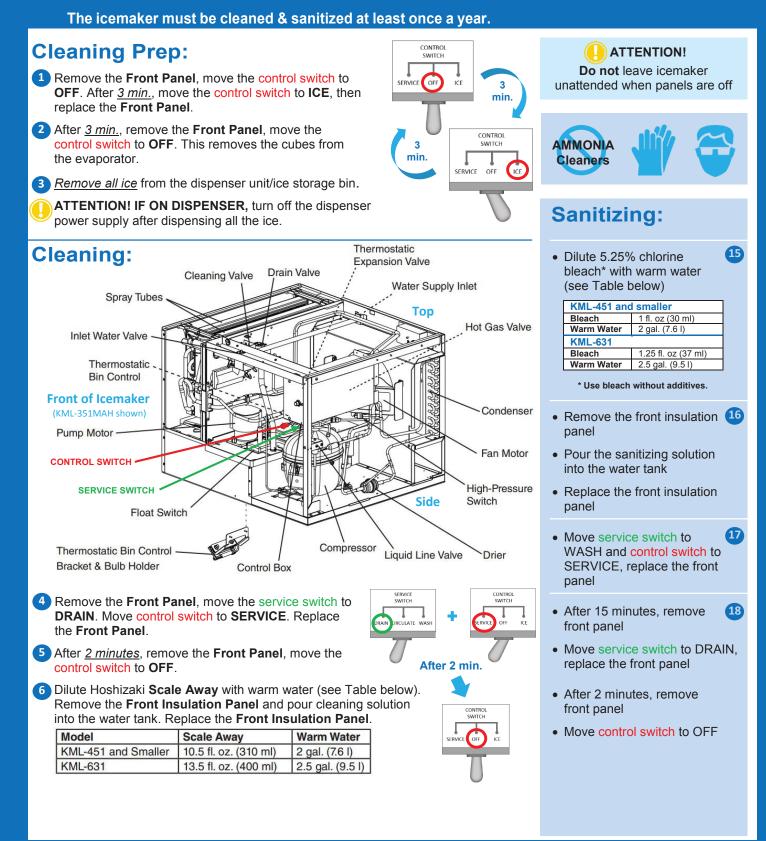

#51007 | 9.16.2016

- 7 Move the service switch to WASH, and the control switch to SERVICE. Replace the Front Panel.
- 8 After <u>30 minutes</u>, remove the **Front Panel**, move the service switch to DRAIN. Replace the Front Panel.
- ATTENTION! To prevent damage to the water pump, do not leave the control switch on SERVICE for extended periods when water tank is empty.
- In bad water conditions, a more thorough cleaning may be required. Move control switch to OFF, then turn off the power supply. Dilute 5 oz. of Scale Away to 1 gallon of warm water. Remove and clean the cube guides, float switch assembly (remove & clean all float parts), water supply tubes, spray tubes, and spray guides. Rinse thoroughly, then replace in their correct positions. Turn the power supply back on. Otherwise, continue to Step 10

## **Cleaning Rinse:**

 
- 10 After 2 minutes, remove the Front Panel, move the control switch to ICE. Replace the Front Panel.
- 11 After <u>3 minutes</u>, move the service switch to WASH, and the control switch to SERVICE. Replace the Front Panel.
- 12 After 5 minutes, remove the Front Panel, move the service switch to DRAIN. Replace the Front Panel
- 13 After <u>2 minutes</u>, remove the Front Panel, move the control switch to OFF.

AMMONIA Cleaners

14 Repeat 3x (Steps 10 thru 13) to rinse thoroughly. Continue to Sanitation – Step (15) on front...










After 2 min.

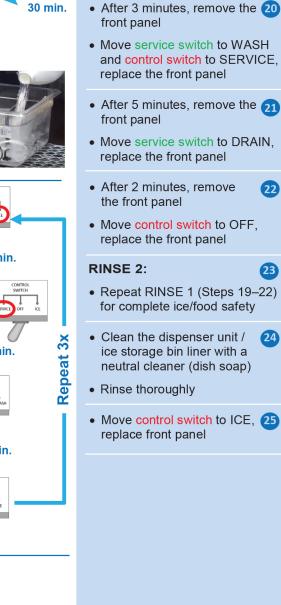

**↓** sanitizing continued...

Move control switch to ICE,

19

22

23

24

RINSE 1: (Steps 19-22)

replace front panel

DOWNLOAD COMPLETE INSTRUCTION MANUAL:



hoshizakiamerica.com/manuals

Type in the model number of your icemaker (including dashes) to download manuals

# **CLEANING SCHEDULE**

Scoop	Dish soap, rinse well
Water Filters	Check psi, change if req'd
Exterior	Dish soap & damp cloth
Bin Door/Top Kit	Warm water & clean cloth
Icemaker/Bin	Follow these instructions
Water Supply Inlet	Clean inlet screen
Condenser	Inspect. Clean with brush
Water Hoses	Inspect. Replace if req'd
• DAILY   • MON	THLY   • YEARLY

### **ATTENTION!**

DO NOT use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals



IF ICEMAKER IS ON DISPENSER. remember to turn on the dispenser after cleaning



# HOSHIZAKI


KMS-822MLH

The ice maker must be cleaned & sanitized at least once a year.

## **Cleaning Prep:**

- Remove the Front Panel, move the control switch to OFF. After <u>3 min.</u>, move the switch to ICE, then replace the panel.
- 2 After <u>3 min.</u>, remove the Front Panel, move the switch to OFF.
- 3 <u>Remove all ice</u> from the ice storage bin and/or dispenser.
- **WARNING! IF ON DISPENSER**, turn off the dispenser power supply after dispensing all the leftover ice.

## **Cleaning:**

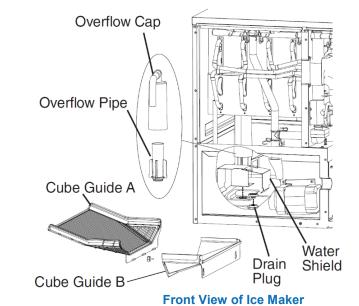

- 4 Remove the **Front Insulation Panel, Cube Guide B & A, Overflow Cap & Pipe, Water Shield,** and **Drain Plug**. After the water tank has drained, replace all items.
- NOTICE! DO NOT cross thread the drain plug or overflow pipe.
- 5 Refill water tank by moving the control switch to ICE, replace the Front Panel. After <u>3 minutes</u>, remove Front Panel, move switch to the OFF position.
- 6 Remove the Front Insulation Panels. Pour 14 fl.oz (414 ml) of Hoshizaki Scale Away into the water tank. Replace the front insulation panel. Turn the cleaning valve <u>left</u> until completely vertical (open).
- NOTICE! AVOID EXCESSIVE FOAMING, wait <u>1 minute</u> before next step.
- 7 Move the control switch to WASH, replace Front Panel.
- **NOTICE! DO NOT** leave the control switch on WASH for extended periods when water tank is empty. It will damage water pump seals.



CONTRO

SWITCH

OPEN



14

16

## Sanitizing:

- Fill the water tank
- CLOSE the cleaning valve
- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- · Move control switch to OFF
- Remove the front insulation 15 panel
- Pour .78 fl. oz (23 ml) of chlorine bleach\* into the water tank
- Replace the front insulation
   panel
- OPEN the cleaning valve

\* Use bleach without additives. Additives cause excessive foaming, and reduces effectiveness of the cleaning.

- Wait 1 minute to avoid
   excessive foaming
- Move control switch to WASH, replace the front panel
- After 45 minutes, remove 17
  the front panel
- Remove the front panel
- Move the control switch to OFF
- Remove the front insulation 18 panel, cube guide B & A, overflow cap & pipe, water shield, and drain plug
- After the water tank has drained, replace all items

#51006 | 7.22.2016

CONTRO

3

min

- 8 After 30 minutes, remove Front Panel, then move the control switch to OFF.
- 9 Remove the Front Insulation Panel, Cube Guide B & A, Overflow Cap & Pipe, Water Shield, and Drain Plug. Clean all items (See Step 10). After the water tank has drained, replace all items.
- **10** In bad water conditions, a more thorough cleaning may be required. Turn off power supply, clean all items in a solution of 5 oz. of Scale Away per gallon of warm water. Rinse and replace the cube guides, float switch, water supply tubes, spray tubes and spray guides. Turn on power supply. Otherwise, continue to step 11.

## **Cleaning Rinse:**

- 11 Turn the cleaning valve to the <u>right</u> until completely horizontal (closed). Move the control switch to ICE, replace Front Panel. After 3 minutes, remove the Front Panel, move switch to OFF.
- ▲ NOTICE! ICE MACHINE WILL NOT WORK, unless valve is completely closed.
- 12 Turn the cleaning valve to the *left* until completely vertical (open). Move the control switch to WASH, replace the Front Panel. After 5 minutes, remove the Front Panel, switch to OFF.
- 13 Remove the Front Insulation Panel, Cube Guide B & A, Overflow Cap & Pipe, Water Shield, and Drain Plug. After the water tank has drained, replace all items.

Continue to Sanitation – Step (4) on front...



#### **OPEN cleaning valve:** To allow cleaning solution flow to the inside the evaporator Turn left to open (vertical)



## Must be closed for normal ice making operation

Turn right to close (horizontal)

CONTROL CONTROL SWITCH SWITCH 30 min.



**CLOSE** 

#### **CONTROL PANEL** ICE > 3 minutes > OFF



### CONTROL PANEL WASH > 5 minutes > OFF

CLOSE cleaning valve:

#### **↓** sanitizing continued...

19

20

28

30

#### RINSE 1: (Steps 19-21)

- CLOSE cleaning valve
- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- Move control switch to OFF
- OPEN cleaning valve
- Move control switch to WASH, replace the front panel
- After 5 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation 21 panel, cube quide B & A. overflow cap & pipe, water shield, and drain plug
- After the water tank has drained, replace all items
- RINSE 2 & 3: (Steps 22-27) 22
- Repeat 2x (Steps 19-21) for complete ice/food safety
- Clean the dispenser / storage bin liner with a neutral cleaner (dish soap)
- · Rinse thoroughly
- CLOSE the cleaning valve 29
- Move control switch to ICE
- Replace all panels

DOWNLOAD COMPLETE **INSTRUCTION MANUAL:** 



hoshizakiamerica.com/support

Type in the model number of your ice machine (including dashes) to download manuals

## **CLEANING SCHEDULE**

Scoop Dish soap, rinse well Water Filters Check psi, change if reg'd Exterior Dish soap & damp cloth Bin Door/Top Kit Warm water & clean cloth

Ice Maker/Bin

- Follow these instructions
- Water Supply Inlet Clean inlet screen Condenser
- Inspect. Clean with brush Water Hoses Inspect, Replace if reg'd
- DAILY | 
   MONTHLY | 
   YEARLY

#### 

DO NOT use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals

## **NOTICE!**

IF ICE MAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning

AMMONIA Cleaners




#### The ice maker must be cleaned & sanitized at least once a year.

## **Cleaning Prep:**

- Remove the Front Panel, move the control switch to OFF. After <u>3 min.</u>, move the switch to ICE, then replace the panel.
- 2 After <u>3 min.</u>, remove the Front Panel, move the switch to OFF.
- 3 *Remove all ice* from the ice storage bin and/or dispenser.
- **WARNING! IF ON DISPENSER,** turn off the dispenser power supply after dispensing all the leftover ice.

## **Cleaning:**

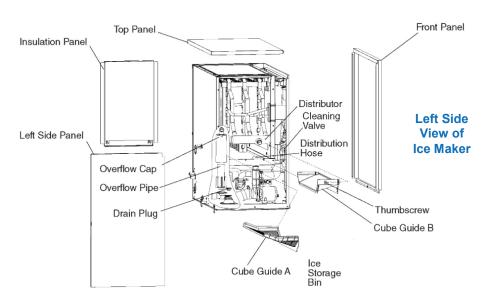

- 4 Remove the Top, Left, and Insulation Panels. Remove the Distributor Hose. Remove the Thumbscrew securing Cube Guide B, then remove both Cube Guides B & A.
- 5 Remove the **Overflow Cap**, **Overflow Pipe**, and **Drain Plug**. Once water tank has drained, replace and reconnect all the items and panels.
- NOTICE! DO NOT cross thread the drain plug or overflow pipe.
- 6 Refill water tank by moving the control switch to ICE, replace the Front Panel. After <u>3 minutes</u>, remove Front Panel, move switch to the OFF position.
- 7 Remove the Top, Left, and Insulation Panels. Pour 14 fl.oz (414 ml) of Hoshizaki Scale Away into the water tank. Replace the insulation, left and top panels. Turn the cleaning valve <u>left</u> until completely vertical (open).
- **NOTICE! AVOID EXCESSIVE FOAMING,** wait <u>1 minute</u> before next step.

#51000 | 7.21.2016





# HOSHIZAKI

KMS-830MLH

AMMONIA Cleaners

### 

DO NOT leave icemaker unattended when panels are off

17

### Sanitizing:

3

min

min

 
- Fill the water tank
- CLOSE the cleaning valve
- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- Move control switch to OFF
- Remove the top, left, and 18
  insulation panels
- Pour .78 fl. oz (23 ml) of chlorine bleach\* into the water tank
- Replace the top, left, and insulation panels
- OPEN the cleaning valve
- \* Use bleach without additives. Additives cause excessive foaming, and reduces effectiveness of the cleaning.
- Wait 1 minute to avoid
   19
   excessive foaming
- Move control switch to WASH, replace the front panel
- After 45 minutes, remove 20
  the front panel
- Move control switch to OFF
- Remove the top, left, and insulation panels
- Remove distribution hose
- Remove thumbscrew from cube guide B
- Remove cube guide B & A
- Remove the overflow cap, 22 overflow pipe, and drain plug
- After the water tank has drained, replace and reconnect all the items

CONTROL

- 8 Move the control switch to WASH, replace Front Panel.
- NOTICE! DO NOT leave the control switch on WASH for extended periods when water tank is empty. It will damage water pump seals.
- 9 After <u>30 minutes</u>, remove Front Panel, then move the control switch to OFF.
- Remove the Top, Left, and Insulation Panels. Remove the Distributor Hose. 10 Remove the Thumbscrew securing Cube Guide B, then remove both Cube Guides B & A.
- Remove the **Overflow Cap**, **Overflow Pipe**, and **Drain Plug**. Clean all items (See Step 12). Once water tank has drained, replace and reconnect all the items.
- 12 In bad water conditions, a more thorough cleaning may be required. Turn off power supply, clean all items in a solution of 5 oz. of Scale Away per gallon of warm water. Rinse and replace the cube guides, float switch, water supply tubes, spray tubes and spray guides. Turn on power supply. Otherwise, continue to step 13



- 13 Turn the cleaning value to the right until completely horizontal (closed). Move the control switch to ICE, replace Front Panel. After 3 minutes, remove the Front Panel, move switch to OFF.
- ▲ NOTICE! ICE MACHINE WILL NOT WORK. unless valve is completely closed.
- 14 Turn the cleaning valve to the <u>left</u> until completely vertical (open). Move the control switch to WASH, replace the Front Panel. After 5 minutes, remove the Front Panel. switch to OFF.
- 15 Remove the Top, Left, and Insulation Panels. Remove the Distributor Hose. Remove the thumbscrew securing Cube Guide B, then remove both Cube Guides B & A.





**OPEN** cleaning valve: To allow cleaning solution flow to the inside the evaporator Turn left to open (vertical)

Scoop

Exterior

#### DOWNLOAD COMPLETE **INSTRUCTION MANUAL:**



hoshizakiamerica.com/support

Type in the model number of your ice machine (including dashes) to download manuals



CLOSE cleaning valve: Must be closed for normal ice making operation Turn right to close (horizontal)

🔔 WARNING!

DO NOT use

ammonia type

cleaners. Can cause

damage to icemaker

WEAR liquid-proof

protect skin & eyes

from cleaning &

sanitizing chemicals

## **CLEANING SCHEDULE**

- Dish soap, rinse well Water Filters Check psi, change if req'd Dish soap & damp cloth Bin Door/Top Kit Warm water & clean cloth Ice Maker/Bin Follow these instructions
- Water Supply Inlet Clean inlet screen Condenser Inspect. Clean with brush
- Water Hoses Inspect, Replace if reg'd DAILY | 
   MONTHLY | 
   YEARLY



CONTROL

#### **↓** sanitizing continued...

23

24

- RINSE 1: (Steps 23-26)
- CLOSE cleaning valve
- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- Move control switch to OFF
- OPEN cleaning valve
- Move control switch to WASH, replace the front panel
- After 5 minutes, remove the front panel
- Move control switch to OFF
- Remove the top, left, and 25 insulation panels
- Remove distribution hose
- Remove thumbscrew from cube guide B
- Remove cube guide B & A
- Remove the overflow cap, (26) overflow pipe, and drain plug
- After the water tank has drained, replace and reconnect all the items.

#### **RINSE 2 & 3:** (Steps 27-34) 27

- Repeat 2x (Steps 23-26) for complete ice/food safety
- Clean the dispenser / 35 storage bin liner with a neutral cleaner (dish soap)
- · Rinse thoroughly
- CLOSE the cleaning valve 36
- Move control switch to ICE
- · Replace all panels

 
## NOTICE!

IF ICE MAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning

gloves and goggles to Cleaners

Tech Support: 1.800.233.1940

37





**CONTROL PANEL** 

WASH > 5 minutes > OFF



CONTROI SWITCH


# HOSHIZAKI

ATTENTION!

KMS-1122MLH(3)

The icemaker must be cleaned & sanitized at least once a year.

# **Cleaning Prep:**

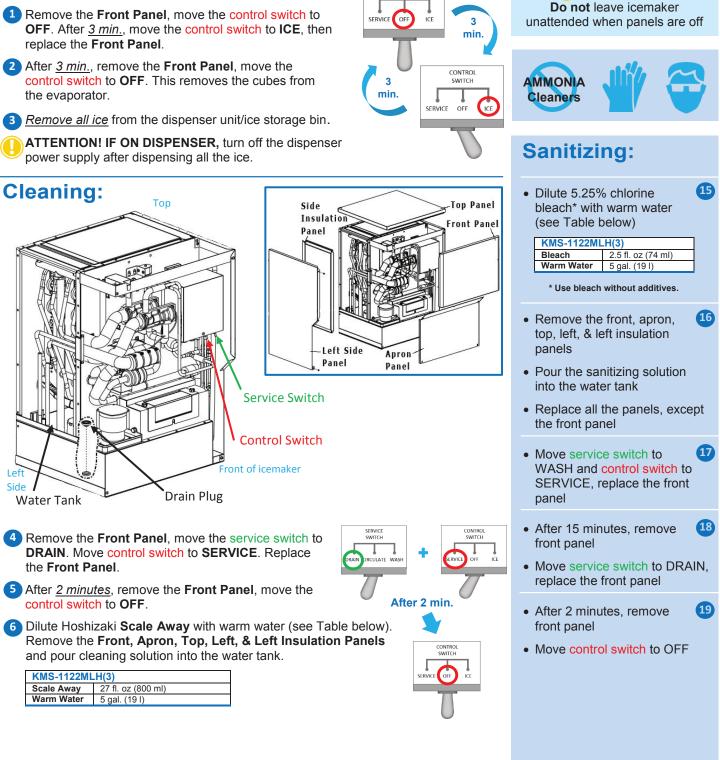


#51008 | 9.15.2016

SERVICE

 7 In bad water conditions, a more thorough cleaning may be required. Move control switch to OFF, then turn off the power supply. Dilute 5 oz. of Scale Away to 1 gallon of warm water. Remove and clean the float switch assembly\*, water supply tubes, spray tubes, and spray guides. Rinse thoroughly, then replace in their correct positions. Turn the power supply back on. Otherwise, continue to Step 8.






- 8 Replace all the Panels, except the Front Panel. Move the service switch to WASH, and the control switch to SERVICE. Replace the Front Panel.
- 9 After <u>30 minutes</u>, remove the Front Panel, move the service switch to DRAIN. Replace the Front Panel.
- **ATTENTION!** To prevent damage to the water pump, do not leave the control switch on SERVICE for extended periods when water tank is empty.

## Cleaning Rinse:

- 10 After <u>2 minutes</u>, remove the Front Panel, move the control switch to ICE. Replace the Front Panel.
- 11 After <u>3 minutes</u>, move the service switch to WASH, and the control switch to SERVICE. Replace the Front Panel.
- 12 After 5 minutes, remove the Front Panel, move the service switch to DRAIN. Replace the Front Panel
- 13 After 2 minutes, remove the Front Panel, move the control switch to OFF.
- 4 Repeat 3x (Steps 🔟 thru 🚯) to rinse thoroughly. Continue to Sanitation – Step (15 on front...



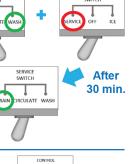







After 2 min.

After 3 min.





**↓** sanitizing continued...

20

23

- RINSE 1: (Steps 20-22)
- Move control switch to ICE, replace front panel
- After 3 minutes, remove the front panel
- Move service switch to WASH and control switch to SERVICE, replace the front panel
- After 5 minutes, remove the 21 front panel
- Move service switch to DRAIN, replace the front panel
- After 2 minutes, remove 22 the front panel
- Move control switch to OFF, replace the front panel

#### **RINSE 2:**

ä

Repeat

- Repeat RINSE 1 (Steps 20–22) for complete ice/food safety
- Clean the dispenser unit / 24 ice storage bin liner with a neutral cleaner (dish soap)
- · Rinse thoroughly
- Move control switch to ICE, 25 replace front panel

#### DOWNLOAD COMPLETE INSTRUCTION MANUAL:



hoshizakiamerica.com/manuals

Type in the model number of your icemaker (including dashes) to download manuals

### **CLEANING SCHEDULE**

- Scoop Dish soap, rinse well Water Filters Check psi, change if req'd Exterior Dish soap & damp cloth Bin Door/Top Kit Warm water & clean cloth Icemaker/Bin Follow these instructions Water Supply Inlet Clean inlet screen Condenser
- Inspect. Clean with brush Water Hoses Inspect. Replace if req'd • DAILY | • MONTHLY | • YEARLY

### **ATTENTION!**

DO NOT use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals




#### IF ICEMAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning



# HOSHIZAKI

DCM-270BAH(-OS)

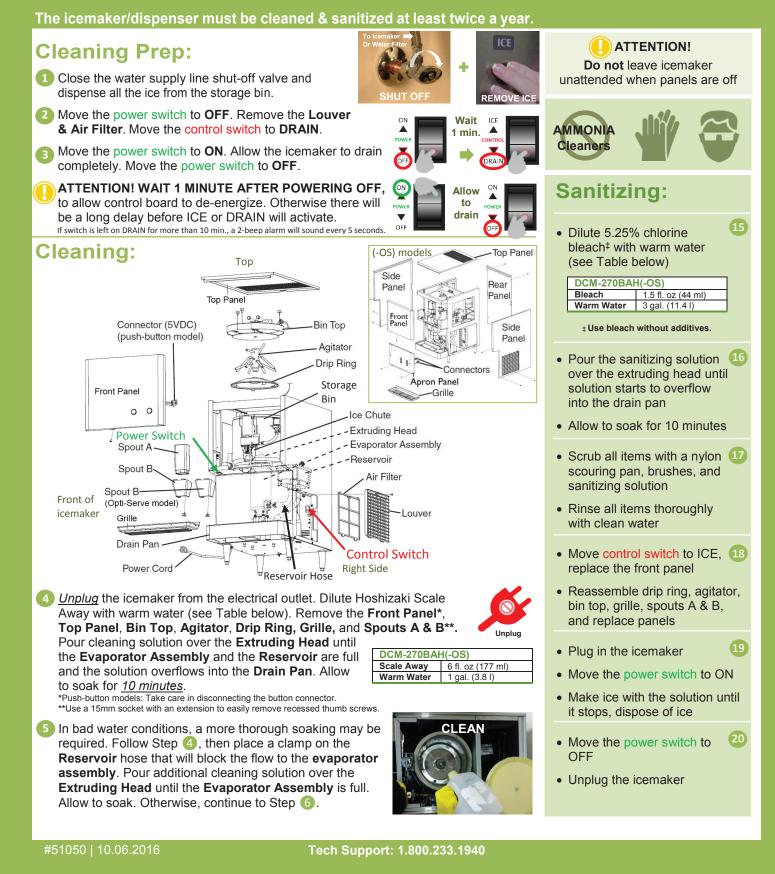

Wait

1 min.

ICE

DRAI

- Using a nylon scouring pad, nylon brushes, and cleaning solution scrub the Storage Bin, Bin Top<sup>†</sup>, Agitator, Drip Ring, Grille, Spouts A & B, Ice Chute, and Drain Pan. Be sure to keep the microswitch mounted on the Bin Top dry
- 7 Remove the clamp (if installed in Step 5) from the Reservoir hose. Rinse all parts thoroughly with clean water before reassembling the Drip Ring, Agitator, Bin Top, and Front & Top Panels. ICE
- 8 Move the control switch to ICE. Plug the icemaker into the electrical outlet. Move the power switch to ON. Make ice using the cleaning solution until it stops, dispose of ice. Move the power switch to OFF.
- ATTENTION! Icemaker might make noise/squealing when first started due to scale being removed from auger/evaporator. This is normal in bad water conditions and will subside after 20 min.



- Move the control switch to DRAIN, and the power switch to ON. Allow the icemaker to drain completely.
- 10 Move the power switch to OFF. Unplug the icemaker from the electrical outlet. Remove the Front Panel, Top Panel, and Bin Top.
- 11 Pour clean, warm water into the ice Storage Bin and melt any remaining ice. Remove Agitator and Drip Ring. Rinse the inside of the Storage Bin, the Agitator, and Drip Ring thoroughly with clean water.
- 12 Pour clean, warm water over the Extruding Head until the Evaporator Assembly and the Reservoir are full and the water overflows into the Drain Pan.
- 13 *Plug* the icemaker into the electrical outlet, then move the power switch to ON. Allow the icemaker to drain completely.
- 14 Move the power switch to OFF, then unplug the icemaker from the electrical outlet.

Continue to Sanitation – Step (6) on front...



#### DOWNLOAD COMPLETE **INSTRUCTION MANUAL:**



hoshizakiamerica.com/manuals

Type in the model number of your icemaker (including dashes) to download manuals







Make ice with solution until machine stops





Unplua





lua In



ATTENTION!

**ENSURE ALL COMPONENTS, FASTENERS &** THUMBSCREWS ARE SECURELY IN PLACE: Make sure that none fall into the ice storage bin

CLEANING	SCHEDULE	<b>.</b> A
• Air Filter	Dish soap, rinse well	DO
Water Filters	Check psi, change if req'd	amr
Exterior	Dish soap & damp cloth	cleane
• Pan/Gear Drain	Clear w/ warm water + brush	damag
Icemaker/Dispenser	Follow these instructions	WEAF
Water Supply Inlet	Clean inlet screen/valves	gloves a
• Extruding Head	Inspect seal bolts/ bearing wear. Tighten or replace	protec
Water Hoses	Inspect. Replace if req'd	from sanitizi
• WEEKLY   • MC	NTHLY   • YEARLY	

# TTENTION!

NOT use nonia type rs. Can cause e to icemaker

R liquid-proof and goggles to t skin & eyes cleaning & ng chemicals

### Move power switch to ON Allow to drain completely Move power switch to OFF Unplug the icemaker **SANITIZE 2:** • Repeat Steps 15–23 for complete ice/food safety

**↓** sanitizing continued..

Pour clean, warm water into

• Plug the icemaker into the

the ice storage bin to melt ice

Move control switch to DRAIN

21

Remove the front, top

panels, and bin top

electrical outlet

- Move the control switch to 25 ICE
- Replace the front, top panels, and bin top
- Open the water supply line 26 shut-off valve, to supply water back to the icemaker
- · Plug in the icemaker
- Move the power switch to ON
- Run icemaker for 30 minutes
- Move the power switch to OFF
- Unplug the icemaker
- Remove the front, top 28 panels, bin top, agitator, and drip ring
- Wipe down the ice storage bin, bin top, agitator, drip ring, and drain pan with a clean cloth
- Move the control switch to 29 ICE
- Reassemble all items, replace all panels, and filter/louver
- Plug in the icemaker
- Move power switch to ON


Tech Support: 1.800.233.1940


30



# HOSHIZAKI

DCM-300BAH(-OS) DCM-500BAH(-OS) DCM-500BWH(-OS)

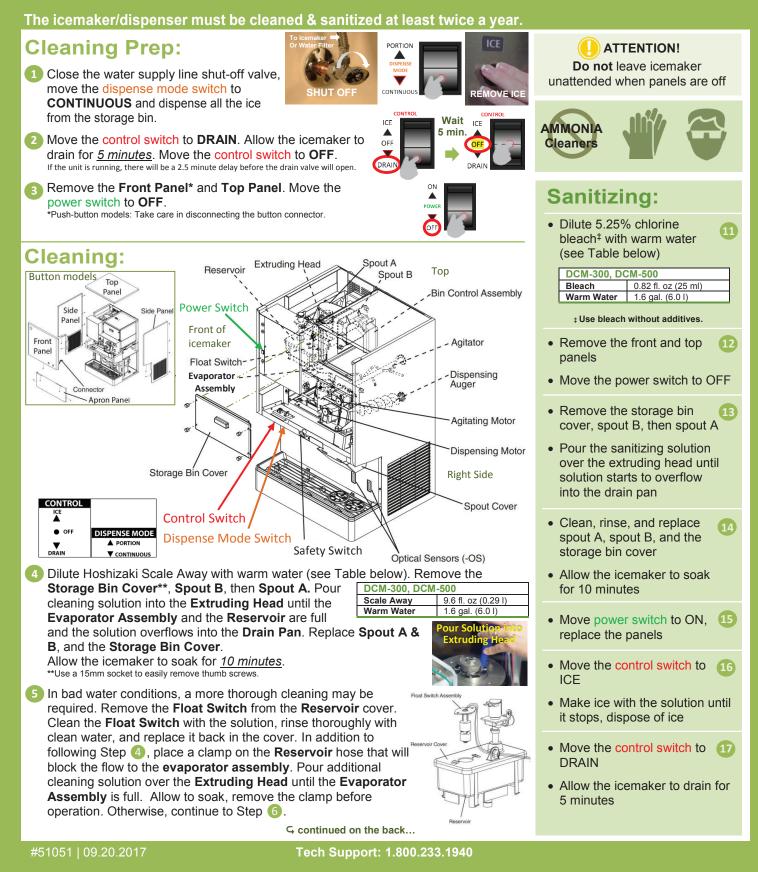

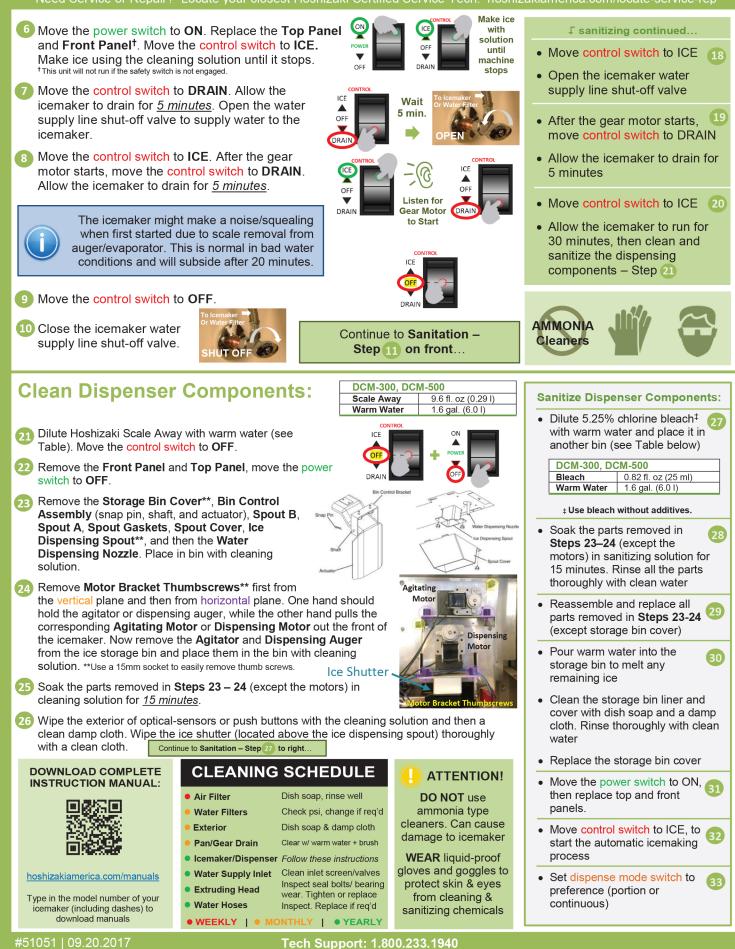



The icemaker and dispenser must be cleaned & sanitized at least twice a year.

ATTENTION! IF ON DISPENSER, turn off the dispenser power supply after dispensing

## Cleaning Prep:

all the leftover ice.

Cleaning:

- Close the icemaker water supply line shut-off valve. Remove the Front Panel, move the control switch
- DRAIN CONTR ICE

- to DRAIN. Make sure the power switch is ON. Replace the Front Panel.
- Allow the water system to drain completely. Remove the Front and Top Panels, move the power switch to OFF.

Top

A <u>Remove all ice</u> from the ice storage bin and/or dispenser.

ΟN POWER OFF

**Right Side** 

Chute Insulation

-Packing

Sanitizing:

AMMONIA

Cleaners

• Dilute 5.25% chlorine bleach<sup>‡</sup> with warm water (see Table below)

(15)

**Sanitizing Solution**  
 Scale Away
 9.6 fl. oz (0.29 l)

 Warm Water
 1.6 gal. (6.0 l)
 ± Use bleach without additives

- · Remove the front and top (16) panels
- · Move the power switch to OFF
- Remove the spout-to-chute 17 strap (includes drip guide on F-1501 and larger)
- Remove the spout
- Pour the sanitizing solution (16) over the extruding head until the evaporator assembly and reservoir are full, and the solution runs out the overflow hose
- · Replace the spout, spout-(17) to-chute strap, and drip guide (if applicable) in their correct positions.
- Allow the icemaker to sit for 10 minutes before operation
- · Move the control switch to 18 ICE
- Move the power switch to ON
- · Replace the panels in their correct positions
- Make ice using the solution until the icemaker stops making ice

#51055 | 10.26.2017

Page 26

 
 Scale Away
 9.6 fl. oz (0.29 l)

 Warm Water
 1.6 gal. (6.0 l)
 Pour the cleaning solution over the Extruding Head until the Evaporator Assembly and Reservoir are full, and the solution runs out through the



**Overflow Hose**.

Replace the Spout, Spout-to-Chute Strap, and Drip Guide (if applicable) in their correct positions.

Infrared Sensor Lens

Allow the icemaker to soak for 10 minutes.

Evaporator Condensat Drain Pan

Evaporator Assembly

G continued on the back...

Tech Support: 1.800.233.1940


HOSHIZAKI


ATTENTION!

**DO NOT** leave icemaker

unattended when panels are off

F-450MAJ(-C) FD-650MAH-C, MWH-C, MRH-C F-801MAJ(-C), MWJ(-C) F-1002MAJ(-C), MWJ(-C), MRJ(-C), MLJ FD-1002MAJ-C, MRJ-C F-1501MAJ(-C), MWJ(-C), MRJ(-C) F-2001MWJ, MRJ/3(-C), MLJ

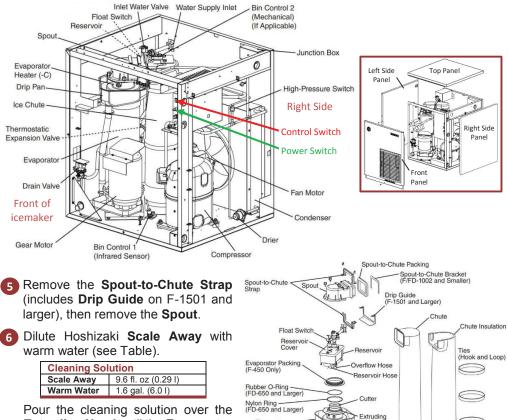

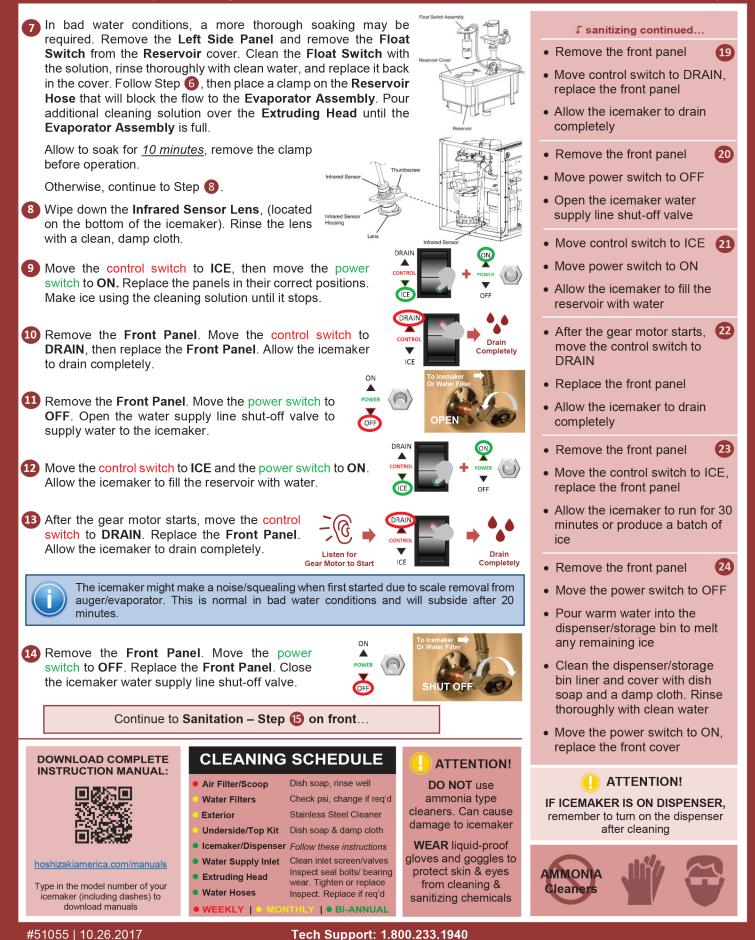



# **Toll-Free Technical Support**

Available 24 hours, 7 days a week (including holidays) **1-800-233-1940** 

www.hoshizakiamerica.com/training/