


Ice Machine Cleaning & Sanitizing

HOSHIZAKI

KML-250MAH, MWH KML-351MAH, MWH KML-451MAH, MWH KML-631MAH, MWH, MRH

The icemaker must be cleaned & sanitized at least once a year.

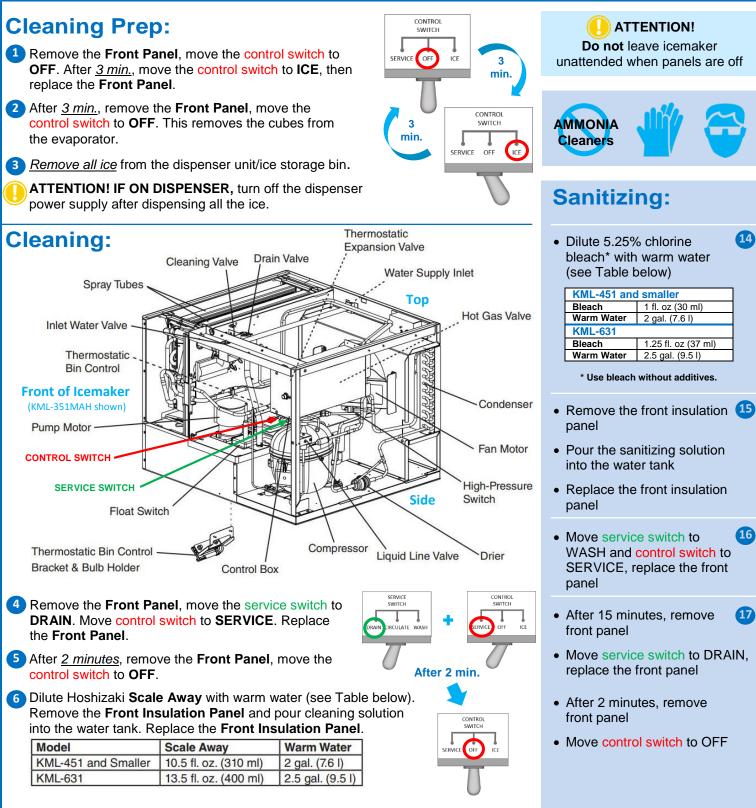

G continued on the back...

Need Service or Repair? Locate your closest Hoshizaki Certified Service Tech: hoshizakiamerica.com/locate-service-rep


- 7 Move the service switch to WASH, and the control switch to SERVICE. Replace Front Panel.
- 8 After <u>30 minutes</u>, remove **Front Panel**, move the service switch to **DRAIN**. Replace **Front Panel**.
- ATTENTION! To prevent damage to the water pump, do not leave the control switch on SERVICE for extended periods when water tank is empty.
- In bad water conditions, a more thorough cleaning may be required. Move control switch to OFF, then turn off the power supply. Dilute 5 oz. of Scale Away to 1 gallon of warm water. Remove and clean the cube guides, float switch assembly (remove & clean all float parts), water supply tubes, spray tubes, and spray guides. Rinse thoroughly, then replace in their correct positions. Turn the power supply back on. Otherwise, continue to Step 10.

Cleaning Rinse:

- After <u>2 minutes</u>, remove Front Panel, move the control switch to ICE. Replace Front Panel.
- After <u>3 minutes</u>, move the service switch to WASH, and the control switch to SERVICE. Replace Front Panel.
- After <u>5 minutes</u>, remove Front Panel, move the service switch to DRAIN. Replace Front Panel
- After <u>2 minutes</u>, remove Front Panel, move the control switch to OFF.
- Repeat 3x (Steps 10 thru 13) to rinse thoroughly. Continue to Sanitation – Step 15 on front...





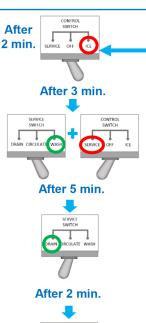

↓ sanitizing continued…

18

21

22

RINSE 1: (Steps 18-21)


- Move control switch to ICE, replace front panel
- After 3 minutes, remove the 19 front panel
- Move service switch to WASH and control switch to SERVICE, replace the front panel
- After 5 minutes, remove the 20 front panel
- Move service switch to DRAIN, replace the front panel
- After 2 minutes, remove
 the front panel
- Move control switch to OFF, replace the front panel

RINSE 2:

3X

Repeat

- Repeat RINSE 1 (Steps 18–21) for complete ice/food safety
- Clean the dispenser unit / 23 ice storage bin liner with a neutral cleaner (dish soap)
- Rinse thoroughly
- Move control switch to ICE, 24 replace front panel

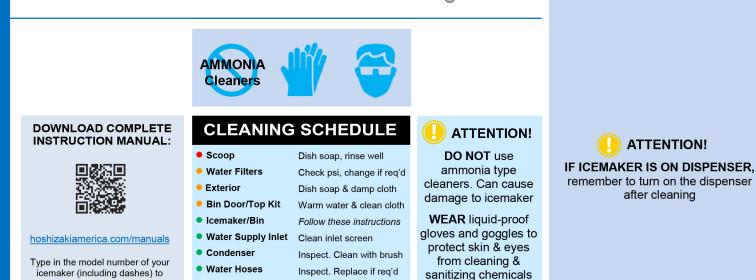

download manuals

• DAILY | • MONTHLY | • YEARLY