

## HOSHIZAKI

## Restarting Hoshizaki ICE MACHINE after prolonged downtime

In order to ensure the safety of your customers and the proper operation of your ice machine after a long period of disuse, Hoshizaki recommends the following steps:



Replace water filters before turning on the water

Confirm water supply is on\*

Confirm power supply is on

step 04

Clean and sanitize the ice machine per the instructions for your particular unit. Cleaning sheets, videos and service providers can be found on the Hoshizaki website

ostep 05

Clean and sanitize the storage bin, or bin in ice & beverage dispenser, according to the manufacturers' recommendations. Cleaning instructions for Hoshizaki bins can be found on Hoshizaki's website.

step 06

Turn on the ice machine

o7

**Cubers:** make one batch and then discard ice.

Flakers/Cubelets: allow to run for 20 minutes, then discard ice

ostep 08

**Allow** ice maker to run for 24 hours before business resumption in order to fill the storage bin.

\*If water filtration system is utilized in the icemaker water supply, follow the manufactuer's instructions for shut down and restart.



Check out cleaning videos

Visit hoshizakiamerica.com for more information



## Restarting Hoshizaki REFRIGERATION after prolonged downtime

The following is a brief guide. For complete instructions and safety information, refer to the appliance's instruction manual. Manuals can be found at www.hoshizakiamerica.com/support. The appliance's model name can be found on the nameplate inside the cabinet.

SHUT DOWN Before shutting down the appliance for an extended period, follow the instructions below.

Before shutting down the appliance, remove all food products

**Unplug** the appliance

**Clean** the appliance as outlined in the Cleaning and Maintenance Instructions section of the appliance's instruction manual

**Prevent** the doors/drawers from closing to reduce the risk of children getting trapped and to help inhibit odors from forming

## RESTART





Plug the appliance in to the electrical outlet. At startup, there is a slight delay before the compressor starts.

**Allow** the appliance to cool down prior to loading it with food products.

Note for Upright Models: If the cabinet temperature is not displayed on the control module, press and hold the standby button\* (b) on the control module until "ON" appears in the display. Factory default is "ON."

\*For Commercial Series models: 1) Plug the appliance into the electrical outlet. 2) Move the power switch to the "ON" position to start the cool-down process.

Note for Prep Table Models: Wash the pans and cutting board before use. The entire rail must be covered by rail dividers and pans (up to 6" (15 cm) deep) and the rail cover must be closed. Otherwise, the appliance will not cool properly. Leave the pans empty until the appliance cools down.



Product manual ook up

Visit hoshizakiamerica.com for more information